

INSTALLATION

Tools Required:

Flat Screwdriver
Super glue (optional)

Time to install: 1-2 minutes

Step One – Verify all materials are included.

Be sure your purchase contains the materials you've requested. This should include the key cap itself, the hinge mechanism and a rubber cup (optional) which will be under the key when install is finished.




Step Two – Examine hinge mechanism and note orientation.

The hinges for this model are quite unique. You must examine and orient these hinges as pictured to the left. Note the placement of the “notches” on the hinges. There is no left and right hinge, as they are identical, but one must be rotated 180 degrees of the other. Make sure the “ridges” of the hinges point up and the “flat” side will be touching the keyboard.

Step Three – Complete hinge mechanism install.

To install, simply slide one of the hinges into the left side plastic shroud, being careful not to force the hinge into place, otherwise it may break. Do the same with the right side hinge mechanism and if done correctly, they will pivot in their respective areas. If the hinge area is vertical (top and bottom plastic sleeves), the installation is virtually the same.

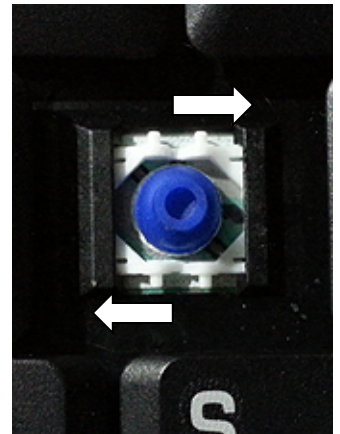

Step Four – Install rubber cup (optional) and press key cap into place.

With the hinge now properly installed, you can place the optional rubber cup if needed. Apply a **small** amount of glue around the OUTER rim of the cup and seat it in the center of the hinge assembly. Sometimes the rubber cup will firmly sit in place by itself, but it is better to use adhesive.

Allow ample drying time before installing the key cap!

Then, simply place the correctly oriented key cap over the hinge mechanism and press down. If the key cap clicks into place, you're all done!

